

Designation	Check (Km)	Replacement (Km)	Information
<b>ENGINE</b>			
Engine	-	3500	Engine Core Replacement
Engine oil	-	Each rally or 800 maxi	Total 0W30 Ineo First, level between 3/4 and maxi
Oil filter	-	800	
Spark plugs	-	2000	
Air filter	Each service	Depending state	Better to have two filter for replacement (cleaning and greasing).
Air line proofness	Each service / rally	-	Air line check with special tool and at 1,5bars
Intercooler	Each rally	Depending state	Cleaning with compressed air, control and sealing without deformation
Exhaust / turbo flange	Each rally	-	Visual check for any crack close to the bolts
Catalytic converter	Each rally	Depending state	Replace if noise from the inside of the catalytic
Radiator	Each rally	Depending visual state	Cleaning with compressed air, control and sealing without deformation
Accessory belt	Each rally	Depending state or 1500	
Gearbox bearing	Each GB disassembly	Depending visual state	
Starter	-	Depending state	
Alternator	-	Depending state	
Low pressure fuel pump	-	3500 or each year	
Turbocharger	3500	7000	
Turbo bracket	Each rally	Depending state	Check tightening
V-band exhaust collar	Each rally	-	Check tightening
Exhaust rubber	Each rally	-	Check state
Oil radiator	Each rally	Depending visual state	Check state
<b>TRANSMISSION</b>			
Gearbox oil	-	Each rally or 230 maxi	Total H50168B - 1L BV (w/o cooler)
Gearbox filter cleaning	-	Each rally or 230 maxi	
Gearbox rebuild	1000	2000	Check at 1000km with seals replacement, complete rebuild at 2000km.
Clutch discs	Each GB disassembly	800	Check pads thickness (5,8mm mini) and presence of cracks
Clutch mechanism screws	-	Each mechanism dismount	
Clutch mechanism	Each GB disassembly	1600	
Left and right driveshafts	Each rally	2000	Check the state of the boots
<b>ENGINE / GEARBOX MOUNTS</b>			
Engine and gearbox rubber	-	2400	Use the specific tool to replace them
Engine mount	Each rally	Depending state	
Gearbox mount	Each service	Depending state	Check the tightening of the gearbox mount / gearbox screws
Anti-torque	Each rally	Depending state	
<b>FRONT &amp; REAR AXLE</b>			
Camber arm	Each service	1000	Replacement if excessive play
Steering arm	Each service	1000	Replacement if excessive play
Caster arm	Each service	2400	Replacement if excessive play
Top damper mount bearing	Each rally	4800	Replacement if excessive play
Upright	Each service	4800	Replacement if excessive play
Front subframe	Each rally	Depending state	Check of the welding : no crack on steering rack and anti-torque
Front and rear wheel studs	-	800	
Front and rear wheel nuts	-	2400	
Front and rear damper rebuild	300-400km	1000	<u>Check</u> : cleaning, check for leaks, check the tightening of the screw on the rod guide, new grease. <u>Rebuild</u> : If hard gravel condition, rebuild at 400km.
Bearings and seals	-	1000	
Rear hub	-	4800	
<b>STEERING</b>			
Steering pump	-	4800	
Steering rack	1000	-	Check the boot condition
Steering radiator	1000	Depending state	
Steering liquid (LDS)	-	200	Following procedure explained in the User guide, chapter 8.9.6
<b>BRAKES</b>			
Front caliper rebuild	Each rally	1200	Replacement of the seals if 1200km or overheating (thermax > 200°C)
Rear caliper	Each rally	Depending state	
Brakes hoses	Each rally	Depending state	
Front discs	-	1200	
Rear discs	-	2400	
Front brake pads	Each service	180	
Rear brake pads	-	400	